

SEIKI™

2.1CH **SOUNDBAR** WITH WIRED SUBWOOFER SC210SBWH



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Remote Control	7
Product Overview	9
Controls and Connections	11
General Operations	13
Pairing your soundbar	14
Troubleshooting	15
Specifications	Last Page

GENERAL SAFETY INSTRUCTIONS

Read this manual thoroughly before you start using the Soundbar.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the soundbar or its controls and to call for an adult to assist.
- Connect the product to the switching adapter model MD48A-1900250-A.
- Do not expose this product to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product

GENERAL SAFETY INSTRUCTIONS (Cont.)

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling when mounted and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Soundbar, make sure your outlet voltage corresponds to the voltage stated on the power supply rating label
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- No naked flame source, such as candles, should be placed on the product.
- Ventilation should not be impeded by covering the ventilation openings.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- No naked flame source, such as candles, should be placed on the product.
- Unplug the Soundbar during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc. Do not insert objects into the slots available on the products. As this could result in the product being damaged and could cause a fire.

GENERAL SAFETY INSTRUCTIONS (Cont.)

 
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power supply from the wall socket.
- Please beware that dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.
- Wall mounted installation must be carried out by a qualified personnel only. Incorrect installation may result in severe personal injury, electric shock and/or fire hazard.

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not place this equipment in a confined space such as a bookcase or similar unit. Allow 20cm above and 5cm spacing on both sides for proper ventilation.
- Do not place the Soundbar near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the soundbar.

REMOTE CONTROL

- The remote control has a reception range of approximately 5m. Be sure to point the remote control directly at the sensor at the front of the soundbar.
- Make sure there are no obstacles in the way. This will interfere with the sensor strength.
- Handle the remote control carefully, please do not drop, apply shock or step on it.
- Do not spill water on it.
- Using the remote control while operating other remote controls which use infra-red rays near the unit as this will cause it to operate incorrectly.
- If you do not intend to use the remote control for a period of a month, remove the remote control to prevent battery leakage or corrosion.

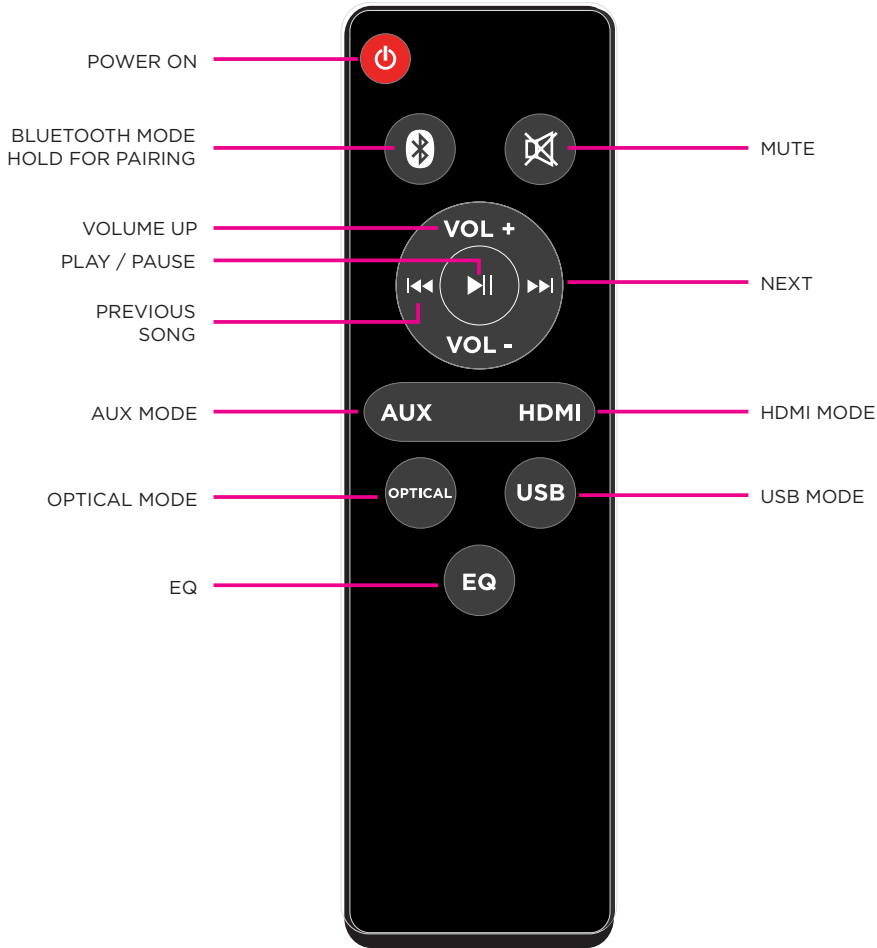


REMOTE CONTROL (Cont.)

CAUTION!

Battery Precautions

- Do not use other batteries other than the one specified in this manual.
- Danger of explosion if incorrectly replaced by a battery other than the one specified.
- Do not store battery with other metallic objects, doing so can cause the battery to short-circuit, leak or explode.
- Ensure the battery is not exposed to excessive heat, direct sunlight or fire.
- Do not try to short-circuit, disassemble or throw the battery into a fire.
- Dispose of batteries promptly and correctly, observing any local hazardous waste regulations.

 
To insert new 2 x AAA batteries or replace current batteries, at the back of the remote control remove the cover of the battery compartment and insert the 2 x AAA batteries ensuring that the + sign on the battery is facing toward the + sign marked within the battery compartment.

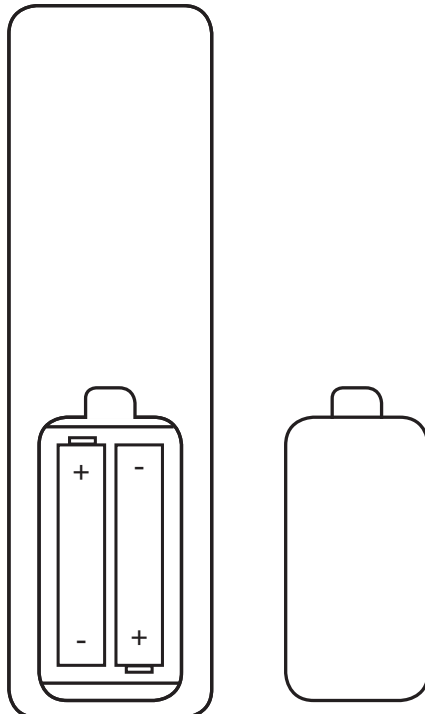

PRODUCT OVERVIEW

SOUNDBAR

 FRONT VIEW

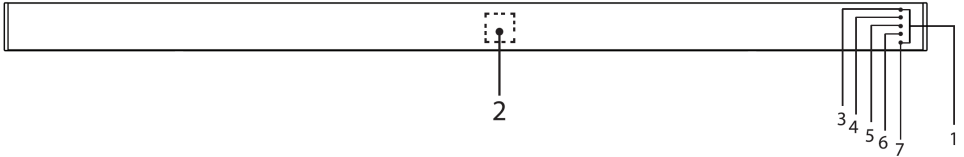

1. LED INDICATORS

Show the current status.

2. REMOTE CONTROL SENSOR

Receive signal from the remote control.

3. STANDBY/SUBWOOFER

Red indicator

4. BLUETOOTH

Blue indicator.

5. COAXIAL/OPTICAL

Green indicator (coaxial: solid, optical: blinking).

6. HDMI

Amber indicator.

7. AUX

White indicator.

RIGHT SIDE VIEW

Front view of main unit



1. ⏻ BUTTON

Switch the unit between On and Standby mode.

2. VOL + / - BUTTON

 
Adjust the volume.

3. BLUETOOTH BUTTON

Select the Bluetooth input.

4. SOURCE BUTTON

Select the input source.

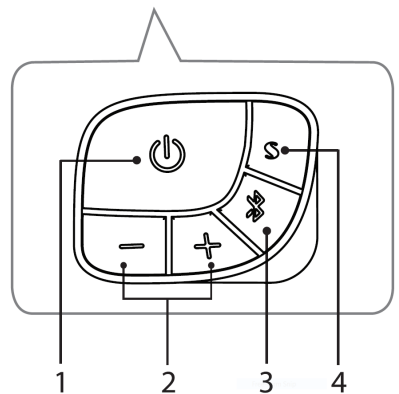

PRODUCT OVERVIEW (CONT.)

SOUNDBAR

REAR VIEW



1. **USB INPUT (MEDIA PLAYBACK)**
2. **AUX INPUT - 3.5MM JACK**
3. **OPTICAL INPUT**
4. **HDMI (ARC)**
5. **POWER INPUT**
6. **SUBWOOFER INPUT**

CONTROLS AND CONNECTIONS

 
HDMI

Connect a HDMI cable (not supplied) from your TV HDMI/ARC port to the HDMI socket on the soundbar. Then change the mode on your soundbar to HDMI Mode.

Note: To enable the Audio Return Channel (ARC) feature, the HDMI must be connected to an ARC enabled HDMI on your TV. (go to next page for details on ARC).

OPTICAL

Remove protective cap from the Optical socket on the soundbar and plug in the optical cable (not supplied) from your Soundbar to the TV optical port.

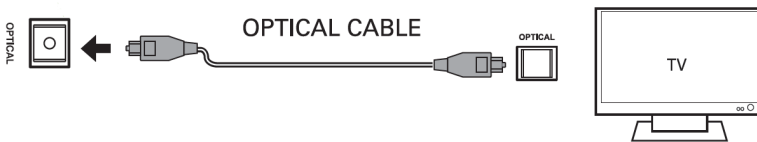

Once connected, change the Mode to OPTICAL from the unit or remote control.

Note: If there is no sound and Optical light is flashing quickly, make sure that the audio settings on your TV is set to appropriate mode.

IMPORTANT INFORMATION

This unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby (Refer to the user manual of the input source device for its audio setting details) with optical.

CONTROLS AND CONNECTIONS (Cont.)

AUDIO RETURN CHANNEL (ARC) / HDMI

ARC function is used for connecting the Soundbar to the TV with a HDMI cable through an audio return channel. This means you can listen to the TV sounds through your Soundbar via HDMI cable.

To enjoy the HDMI ARC Mode

1. Make sure the Soundbar is connected to the TV HDMI(ARC) port.
2. Ensure the Soundbar is set to HDMI Mode
3. The sound should relay through the soundbar and you can also adjust the volume of the sound thats coming through the soundbar with your TV remote control.

Note: If the sound does not automatically produce from the soundbar, TVs may need to be set onto HDMI (CEC) turned on within the TV settings, with some of them having options to turn on ARC mode directly.

USB Charging

1. Connect our smartphone or music player for charging.
2. The port offers a 19VDC 2.5A output

Note: Do not connect any USB storage device to the port to avoid damage.

AUX/LINE IN

1. Insert the 3.5mm audio input cable (included) into the AUX socket at the back of the soundbar.
2. Insert the other end of the 3.5mm/RCA cable to your audio source.
3. Power on the unit by pressing the power button on the unit or remote control.
4. Press the source button repeatedly, or AUX button on the remote control to enter AUX mode.
5. Use the Vol+ and - at unit or remote control to adjust the volume.

GENERAL OPERATION

During On mode, press SOURCE on the unit repeatedly to select between AUX, BT (Bluetooth[®]), COAXIAL, OPTICAL, HDMI OUT (ARC) modes. Operate your audio device directly for playback features. When input signal cannot be decoded (e.g. DTS Studio Sound), the unit is mute and the mode indicator rapidly blink.

Turning on/off the unit

1. Insert the output cable from the AC adaptor into power socket on the rear of the Sound Bar (Refer to page 10).
2. Connect to AC mains plug into socket outlet properly.
3. Press the power button on the right side panel of Sound Bar or top of remote control to power on the unit.
4. Long press power button on the Sound Bar or the remote control to switch off the unit.

Music source selection

Press the button on the RC that is indicating the mode you want to select: HDMI, USB,

Volume adjustment

Press the Volume +/- button on the remote or on the front panel of Sound Bar to adjust the sound level to the desired level.

Mute function

When listening to music in any mode, press the mute button on the remote control to activate the mute function. Press it again or press the volume +/- button to cancel the mute function.


EQ function

Press EQ button on remote control to toggle among the different sound effects.

PAIRING YOUR SOUNDBAR

Pairing with a Bluetooth Enabled Device:

Before you play music from your Bluetooth device, it needs to be paired with the Soundbar.

1. Once powered, press the  button on the remote control to activate pairing mode.
2. Now that the unit has entered pairing mode, on your Bluetooth device select to search for devices.
3. Select **"SC210SBWH"** in the list of devices that appear. The Bluetooth indicator light will stop flashing and will stay completely illuminated when there is a successful connection.
4. To disconnect/unpair the devices switch to another mode on the soundbar or Disable the Bluetooth on your device.
5. Play your favourite music once you are connected.

NOTES:

- The Bluetooth range between the soundbar and your device is up to approx. 8 metres. Obstacles may reduce connectivity range.
- This Soundbar may not be compatible with all Bluetooth devices.
- With a Weak signal, your Soundbar may disconnect with your device, but it will continue to stay in Bluetooth mode until signal strengthens.
- If you already have a device connected to the Soundbar, press and hold the Pairing button for 2 seconds for the unit to go into pairing mode with the current connection being disconnected.

TROUBLESHOOTING

Never try to repair the soundbar yourself. If you encounter any problems when using this unit, check the following points before seeking for service.

Problem	Solution
No Power	<ul style="list-style-type: none">• Ensure that the Switching Adaptor is connected to power socket outlet.• Ensure that there is power at the AC outlet.• Press standby button to turn the unit on.
Remote control does not work	<ul style="list-style-type: none">• Before you press any SOURCE button, first select the correct source.• Reduce the distance between the remote control and the unit.• Insert the battery with its polarities (+/-) aligned as indicated.• Replace the battery.• Aim the remote control directly at the sensor on the front of the unit.
No response from the unit	<ul style="list-style-type: none">• Disconnect and reconnect the AC power plug, then turn the unit on again.
I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing	<ul style="list-style-type: none">• Ensure the Bluetooth function is activated on your Bluetooth device.• Ensure you have paired the unit with your Bluetooth device.
No connection between the main unit and the subwoofer	<ul style="list-style-type: none">• Ensure the mains cables of the main unit and the subwoofer are both connected securely to the mains power socket.

SPECIFICATIONS

Power Supply	DC 19V 2.5A
Output Power	Total: 50W RMS
Tweeter	0.65" x 2
Driver	4" Subwoofer
Frequency Response	Soundbar: 50Hz to 20kHz Subwoofer: -10dB
Amplifier	Soundbar: 5 (RMS) x 4, @<3% THD
Sound Pressure Level	50dB
Dimensions	Soundbar: 950 (w) x 52 (h) x 63 (d) mm Subwoofer: 120(w) x 270 (h) x 270 (d) mm



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Ayonz Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.

SEIKI™

CUSTOMER HELPLINE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd