

SEIKI

STICK MIXER

SC600SM



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Product Overview	9
Installation	10
Operation	11
Cleaning & Maintenance	12
Specifications	12
Customer Helpline	Last Page




GENERAL SAFETY

IMPORTANT INFORMATION

Read this manual thoroughly before you start using the product.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN		<p>The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.</p>
<p>This unit must be serviced by a qualified service personnel only.</p>		<p>The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.</p>

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

GENERAL SAFETY (Cont.)

- This appliance is intended for private household use only.
It is not intended for commercial/industrial or trade use. Do not use it outdoors.
- Do not use this stick mixer for anything other than its intended purpose, and only use it as described in this manual.
Any other use is not recommended and may cause fire, electric shock or injury.
- Misuse of the appliance may result in potential injury, risk of fire and/or electric shock. We accept no liability for any eventual damages or injury misuse of the product or noncompliance with the instructions.
- DO NOT operate the stick mixer under the following conditions:
 - * In a damp place or in areas with high humidity (such as in a bathroom)
 - * On or near a hot cooktop, in a heated oven, or near an open flame.
 - * On a metal tray.
 - * In confined spaces or under overhanging furniture/structures.
- The use of accessory attachments not recommended in this manual may cause electric shock, fire or personal injuries.



The blades are very sharp! To avoid injuries, please handle blades with utmost care.

- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- Be careful if hot liquid is poured into the stick mixer as it can be ejected out of the appliance due to a sudden steaming.

GENERAL SAFETY (Cont.)

- Do not leave the stick mixer unattended when the power is turned on.
- Ensure the stick mixer is switched off before removing it from the base.
Do not move the appliance while it is switched on.
- Always unplug the stick mixer from the outlet when it is not in use.
To disconnect, turn off the power at the outlet, then remove the plug from the wall. Grip the plug when disconnecting, do not pull the cord.
- **CAUTION:** Unplug the stick mixer and allow it to cool before cleaning and maintenance. To prevent damage to the appliance, do not use abrasive or alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

CAUTION: HOT!

- Do not touch any part of the stick mixer housing when it is in use.
The surfaces get hot. Only touch the handle. Do not put any part of your hand or body near the stick mixer when it is turned on.
- Take care when handling the stick mixer during use.
 - Before using check that the voltage of wall outlet correspond to the one shown on the rating plate.
 - Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
 - If the supply cord is damaged it must be replaced by the manufacturer or a authorized service agent or a qualified technician in order to avoid a hazard.
 - Always disconnect the product from the supply if it is left unattended and before assembling, disassembling or cleaning.
 - Do not let cord hang over edge of table or hot surface.
 - Do not immerse upper part of stick mixer into water as this would give rise to electric shock.
 - Close supervision is necessary when your appliance is being used near children or infirm persons.
 - Avoid contacting moving parts.

GENERAL SAFETY (Cont.)

- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the stick mixer. A scraper may be used but must be used only when the stick mixer is not running.
- The appliance cannot be used for chopping ice or blending hard and dry substance, otherwise the blade could be blunted.
- To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
- Be sure chopper lid is securely locked in place before operating appliance.
- The use of accessory not recommended by the manufacturer may cause injuries to persons.
- Do not operate the appliance for other than its intended use.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Save these instructions.
- The use of accessory not recommended by the manufacturer may cause injuries to persons.
- Before removing the lid from the jar, release the button and unplug the appliance, wait until the blades have come to a complete stop.
- Always remove the blade assembly before pouring contents from jar.
- Be sure to switch off the appliance after each use of your food processor. Make sure the motor stops completely before disassembling.
- The metal blades are extremely sharp, please handle carefully.
- Always hold the blade stem instead of cutting edge when handling and cleaning the blade.
- Be care of potential injury from misuse.

GENERAL SAFETY (Cont.)

ELECTRICAL SAFETY AND POWER CORD HANDLING


- Before connecting the stick mixer to the power supply, make sure your outlet voltage and circuit frequency correspond to the voltage indicated on the appliance rating label and your outlet socket is properly earthed. If this is not the case, do not use the stick mixer.
- Do not use any other appliance at the same time on the same electrical circuit as it may overload the circuit and blow the fuse or breaker.
- To protect against fire and electric shock, do not immerse the cord, plug, power base or the stick mixer itself in water or other liquid. Do not expose the electrical connections to water.
- Avoid spillage on the connector.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat. Do not let the cord hang over the edge of a table or benchtop. The cord should be run in such a way that there will be no risk of anyone pulling it inadvertently.
- Do not use an extension cord with this stick mixer.
- Do not pick up or operate the appliance if the power supply cord, plug, power base or stick mixer housing is damaged, or after it malfunctions or has been damaged in any manner.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard. In case of damage, contact our after sales support centre for advice.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

The appliance must not be immersed.

PRODUCT OVERVIEW

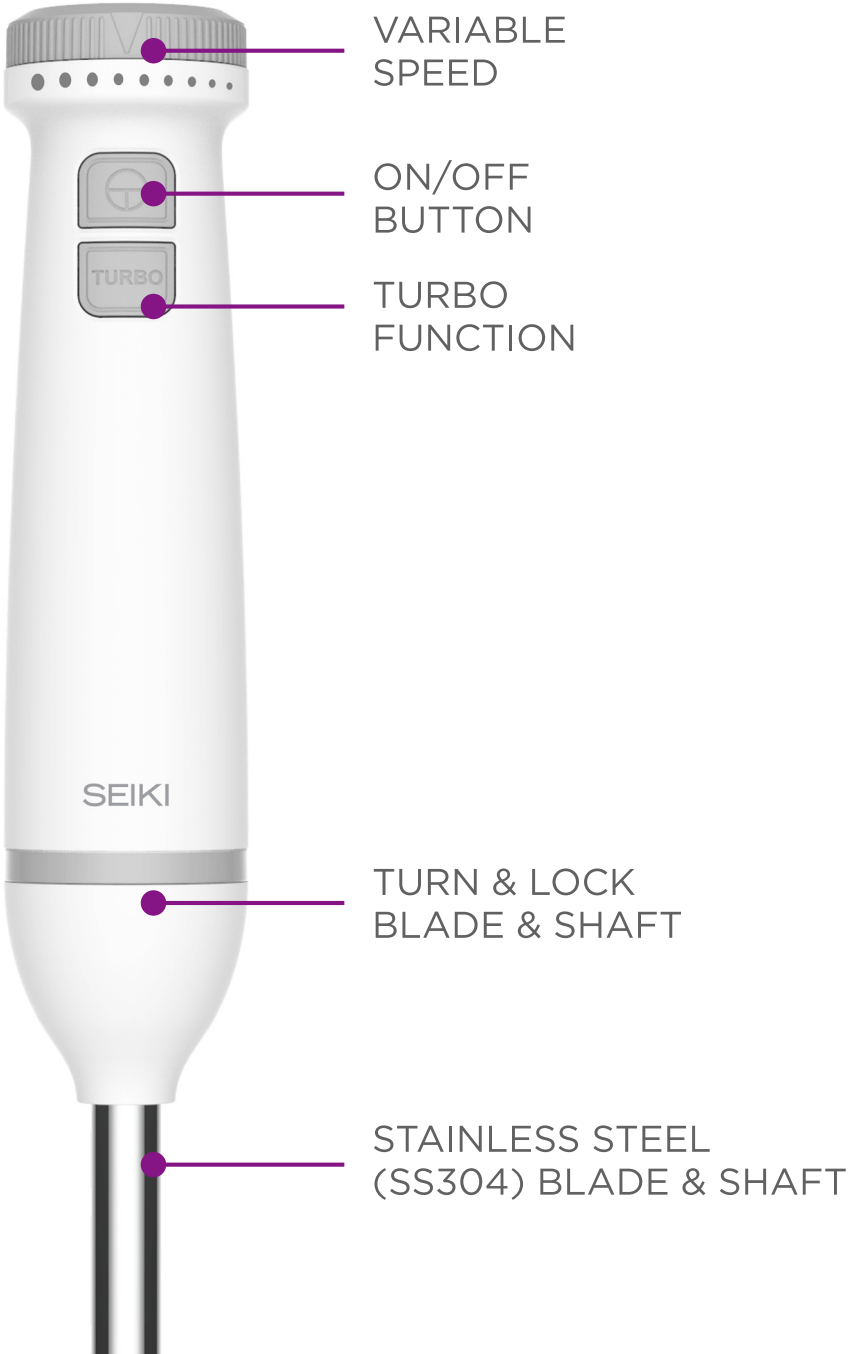

INSTALLATION

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

UNPACKING

- When unpacking the appliance, be sure to keep all the packaging materials until you have made sure your new appliance is undamaged and in good working order. This product has been packaged to protect itself against transportation.
- Be sure to remove all packaging materials around the appliance and that the plastic film used is also removed.
- **CAUTION:** Plastic wrapping can be a suffocation hazard for babies and young children. Make sure all packaging materials are out of reach for children and that they are disposed of correctly.

OPERATION

USING YOUR STICK MIXER

Before the first use, clean the stick mixer.

The time running unit without load can't exceed 15s.

IMPORTANT: Blades are very sharp, handle with care. Ensure that the hand-held stick mixer is unplugged from the power outlet before assembling or removing attachments.

1. Max operation duration per time should less than 1 minute, and 3 minute rest time must be maintained at two consecutive cycles.
2. To assemble the detachable shaft with the motor unit, turn the shaft anti-clockwise direction until tightened. To disassemble, just turn in the adverse direction.
3. Simply plug the hand-held stick mixer to power outlet.
4. Lower the hand-held stick mixer into food. Then press and hold the low speed button or high speed button to start operating.
5. To stop the hand-held stick mixer by releasing the low speed button or high speed button.
6. When blending carrot, cut small piece, and place it into small chopper bowl, then add water, the max quantify of carrot can't exceed 200g, water, 300g, in every blending.

CLEANING & MAINTENANCE

1. Unplug the appliance and remove the detachable stem.
NOTE: Do not immerse the detachable stem of the stick mixer in water because overtime the lubrication on the bearings may wash away.
2. Wash the detachable stem under running water, without the use of abrasive cleaner or detergents. After finishing cleaning the detachable stem, place it upright so that any water which may have got in, can drain out. The stem is dishwasher safe component.
3. Wash the cup, bowl, beater and blade in warm soapy water. The bowl and the beater are not recommended to place in dishwasher as the plastic component deteriorates through prolonged use of dishwasher cleaning.
4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as a electric shock may occur.
5. Dry thoroughly.
CAUTION: Blades are very sharp, handle with care.

QUICK CLEANING

Between processing tasks, hold the hand-held stick mixer in the cup half filled with water and turn on for a few seconds for quick cleaning.

SPECIFICATIONS

Rating	220-240V ~ 50-60Hz, 600W
Dimensions	60 (W) × 100 (D) × 220 (H) mm

SEIKI

SUPPORT: info@ayonz.com

DISTRIBUTOR: Ayonz Pty Ltd