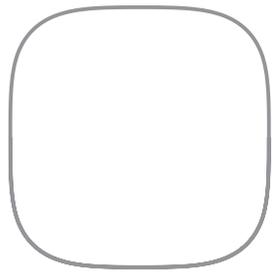# S1 NETFLIX 遥控器说明书V1.0
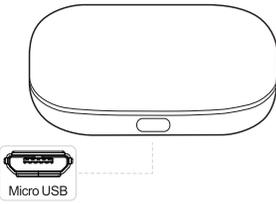
规格：65x100mm 4折页 8P

材质：100克书纸

ANDROID TV DONGLE

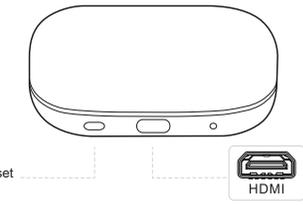## QUICK START GUIDE

Please read this manual carefully before using, and keep it for future reference.
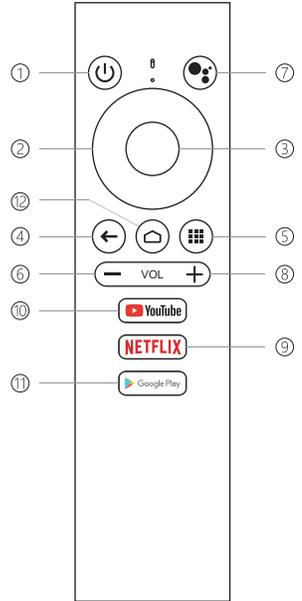
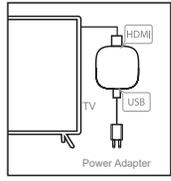**Support: 1300 296 699 | info@ayonz.com**

Front

Micro USB

Back

Bluetooth/Reset Button

HDMI

Bluetooth Remote

① ⑦ ② ③ ⑫ ④ ⑤ ⑥ ⑧ ⑩ ⑨ ⑪

VOL

YouTube
NETFLIX
Google Play

	Button	Description
01	⏻	POWER ON/OFF
02	◎	DIRECTION/NAVIGATION
03	○	OK
04	←	RETURN/BACK
05	▦	APPS
06	—	VOLUME DOWN
07	🎤	GOOGLE ASSISTANT
08	+	VOLUME UP
09	NETFLIX	START NETFLIX
10	YouTube	START YOUTUBE
11	Google Play	START GOOGLE PLAY
12	⌂	HOME

Google, Google Play, YouTube, Android TV, Chromecast and other related marks and logos are trademarks of Google LLC.

Connect to TV

Display:
Connect one end of the HDMI Cable provided into the HDMI Port on the back panel of your TV Dongle, while connecting the other end of the HDMI Cable to an HDMI Port on the TV.
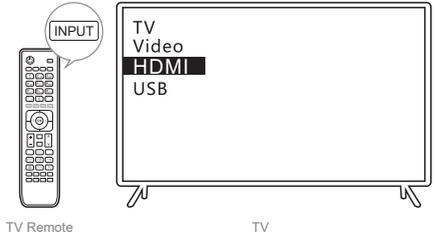
Power:
Connect one end of the Micro USB Cable provided to the TV Dongle, while connecting the other end to the Power Adapter provided, or instead plug it into USB port located on TV.

HDMI
TV
USB
Power Adapter

Micro USB Cable (Power)

Mini HDMI to HDMI

TV Input

To use your TV Dongle, ensure your TV has the HDMI input that the TV Dongle is connected to selected (HDMI2, etc...).

Press the **INPUT** or **SOURCE** button on your TV Remote to access the TV's input selection menu.

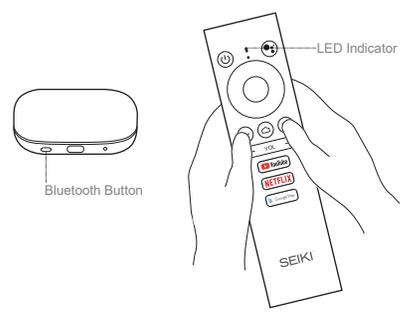INPUT

TV
Video
HDMI
USB

TV Remote

TV

Bluetooth Remote Connection

To pair the Bluetooth Remote with your TV Dongle, both the Bluetooth Remote and TV Dongle will need to enter 'pairing mode'.

TV Dongle:
While the TV Dongle is powered on, press the **BLUETOOTH** button for the TV Dongle to enter 'pairing mode'.

Bluetooth Remote:
Place the Bluetooth Remote within 30cm of the TV Dongle. Then press and hold both the **RETURN** and **APPS** buttons simultaneously, until the LED Indicator flashes quickly. This indicates the Bluetooth Remote has entered 'pairing mode'.

LED Indicator

Bluetooth Button

Connect to a Network

This TV Dongle supports Wireless Network Connection, use of a Wired Network Connection requires a suitable Ethernet Adapter (not included).

Refer to **Home\System Setting\Network Setting** to enable Wireless Network and setup a connection to your local WiFi.

Note, for better WiFi connection keep the TV Dongle vertical.

TV

Modem/Router